

Important Instructions!

4-in-1 Wind-Up Emergency Flashlight

USE OF THE PRODUCT

- Carefully remove the unit from its box and protective wrapping.
 - **To Charge the 4-in-1 Wind-Up Emergency Flashlight:** Open the crank from its storage position against the flashlight. Crank the flashlight much like a fishing reel. Cranking it for 1 minute gives you over 30 minutes of light. Excess cranking will not hurt the unit.
 - **Flashlight:** The l.e.d. lights are shatterproof and should last almost forever. The lights are controlled by an on/off switch. Push forward for all 3 lights to illuminate. Push the opposite direction to turn off. **NOTE: Older models had a 3-position switch (3 l.e.d. lights on, off, and 1 l.e.d. light on). This model has been discontinued.**
 - **Lamp Specifications:** Maximum brightness: 45000 mcd; Lamp power: 2.5 watt; Lamp effective distance: approximately 30 meters (98.4 feet)
 - **Cell Phone Adapters:** A small bag is included that has the cell phone wire and adapters. These plug into the flashlight under the rubber flap on the left side of the flashlight. **IMPORTANT:** The cell phone plug is the lower of the two holes under the rubber flap. Connect the other end to your cell phone.
 - **Cell Phone Charging Instructions:** The 4-in-1 Wind-Up Emergency Flashlight can charge your cell phone or PDA battery. To start charging, turn off the l.e.d. lights, radio, and siren. Attach the correct cell phone adapter to the power cord and plug into your cell phone. Plug the opposite end of the power cord into your 4-in-1 Wind-Up Emergency Flashlight. Begin charging your cell phone by cranking the handle at the rate of approximately 2 – 3 cranks per second, which generates approximately 6.2 volts. Because the product is voltage-regulated, turning the handle faster can not damage the cell phone or PDA and will not speed the charging process. Three minutes of cranking will provide 2 – 8 minutes of talk time. You can have an endless supply of talk time by continuously cranking the 4-in-1 Wind-Up Emergency Flashlight.
 - **Cell Phone Compatibility:** The following cell phones are compatible with the 4-in-1 Wind-Up Emergency Flashlight:
 - * **Nokia:** 1000 thru 9000 Series
 - * **Samsung:** SGH-c207, SGH-c225, SGH-n105, SGH-q105, SGH-3500, SGH-6100, SGH-8500, SGH-p730, SGH-p735, SGH-p777SCH-411, SCH-811, SCH-2000, SCH-n300, SCH-t30, SPH-a400, SPH-n200, SPH-n300 and UpRoar
 - * **LG:** C1300, L1100, L1150, L1200, L1400
 - * **Motorola:** V300, V400, V500, V505, V525, V551, V600, V60, V66, & MPX200, C350, C650, V180, V188 and V220
- Other adapters will be introduced as they are made available by the manufacturer. Specialty electronic shops sometimes offer special adapters.
- **FM Radio:** Turn the radio on with the small black wheel on the right side of the flashlight. This wheel controls the volume as well. To find the nearest stations, use the “scan” button on the face of the flashlight. It will search for another station each time it is pressed. The opposite switch resets the station to the beginning of the radio band. **NOTE:** For privacy, a personal headset may be plugged into the top hole under the black rubber flap. Optional headset or ear piece is not included with the unit.
 - **Siren:** The siren is handy if you should become lost, disoriented, or buried underneath debris. To get a short blast of the siren, press the round black button for a moment. Push in the round black button for a continuous siren. Push again to turn off the siren.

NOTE: Manufacturer offers a 30-day replacement or money-back guarantee for this product.

Visit us at: www.super-cool-products.com

Phone Toll Free: 1-877-574-2669

© Super Cool Products, Inc. 2003 – 2008. All Rights Reserved.